




To Install The Projector On The Projector Wall Mount

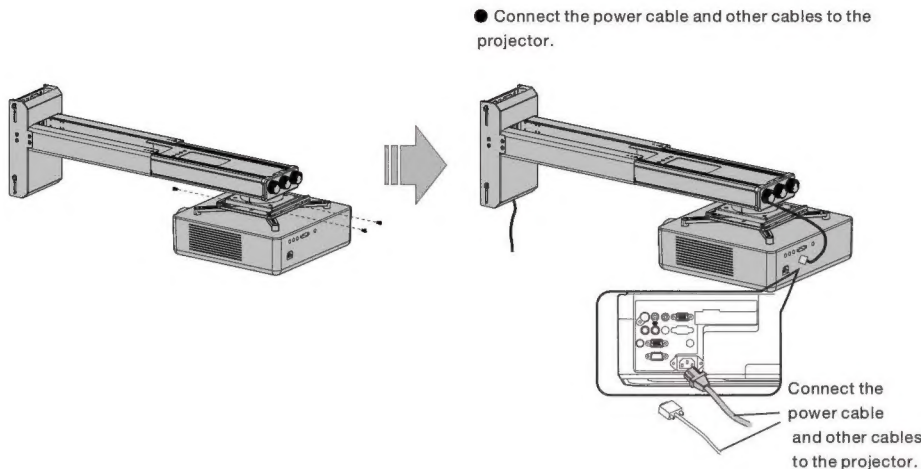


To Adjust The Vertical Tilt

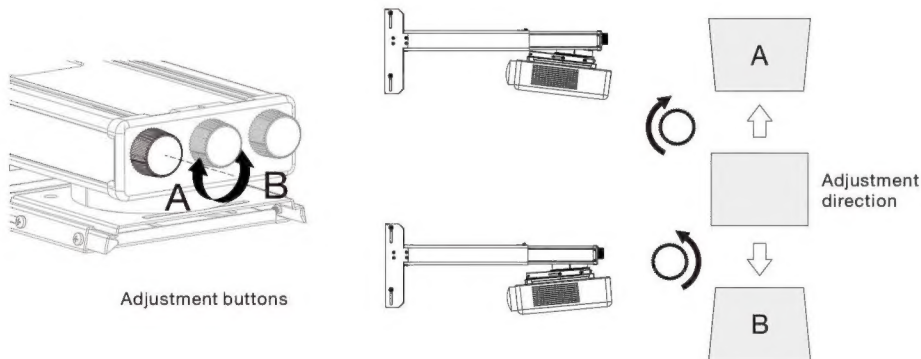


To Adjust The Horizontal Roll

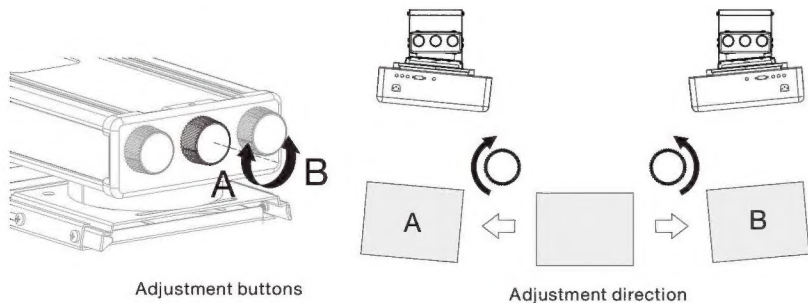


To Adjust The Horizontal Rotation

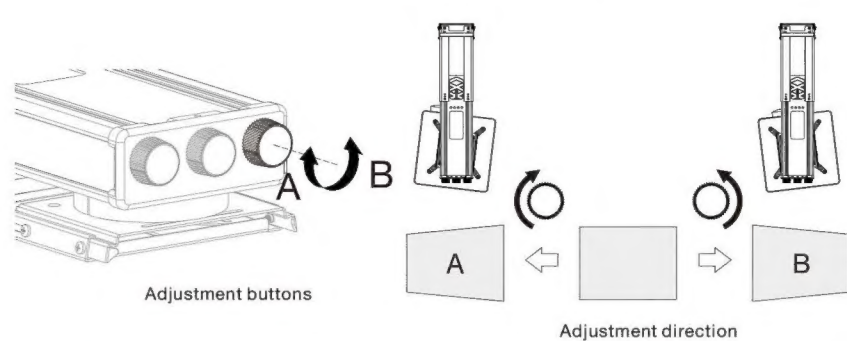

To Adjust The Forward/Backward Slide

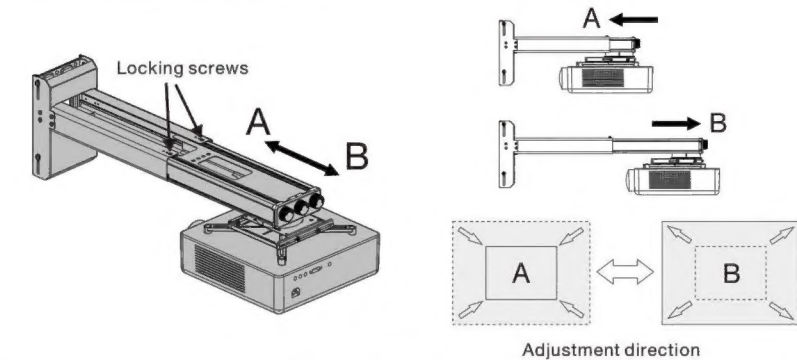


To Put On The Decorative Cover

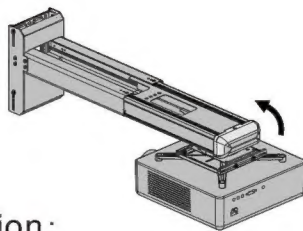


Product Information:

Net weight: 3.3kg	Rated capacity: 15kg
Adjustable angle: Longitudinal inclination、Level angle、Yaw angle $\pm 5^{\circ}$ (3 directions)	
Adjustable range: From the installation plate center horizontal distance 360mm ~ 665mm	

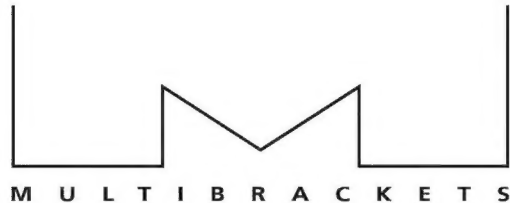

M Projector Mount Short Throw Deluxe 300-700

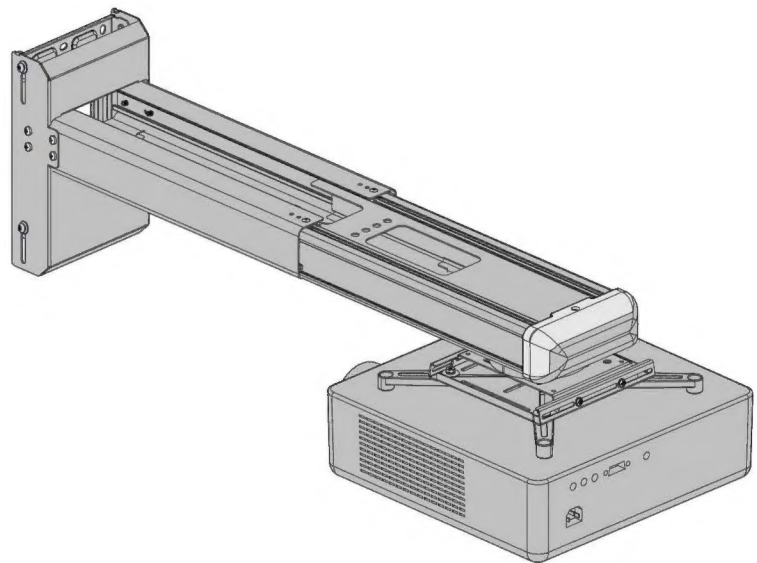

- Be sure to read this manual thoroughly and to do the installation work safely. Keep this manual available for future reference.
- Sufficient expertise is required for installing this projector wall mount.
- Do not use the projector wall mount for purposes other than for which it is designed.

Important Safety


- 1 Be sure to read this manual thoroughly to do the installation work.
- 2 Only qualified service personnel (two or more) should carry out installation or dismantling of the projector from the projector wall mount.
- 3 **Use with products heavier than the maximum weights (Weight Capacity : <15kg) indicated may result in instability causing possible injury.**
- 3 For safety reasons, check the strength of the wall before installation. If the wall is not strong enough, reinforce it sufficiently before installation.
- 4 Do not make alterations to the projector wall mount.
- 5 Do not install the projector wall mount on a wall subject to vibration or impact.
- 6 To avoid fire, do not install the projector with the projector wall mount in a humid or excessively dusty place.
- 7 Use the supplied accessories only. Use of accessories other than those supplied may result in damage to the projector wall mount.
- 8 When dismantling the projector from the projector wall mount, be sure to unplug the AC power cord and other connecting cables beforehand.
- 9 Do not hit or hang any heavy objects on the projector wall mount. If the projector wall mount is damaged, stop use and contact a qualified service person immediately.
- 10 Please install this apparatus only on the horizontal surface instead of the slanting one.

* **Manufacturer is not liable for any damages or injury caused by mishandling or improper installation.**

Checking The Supplied Accessories


Setting plate (1)				Wall plate (1)				Extend arms (4)			
NO	diagrammatic presentation	designation	quantity	NO	diagrammatic presentation	designation	quantity	NO	diagrammatic presentation	designation	quantity
A		Screw (M6X55)	5	G		Screw (M5X25)	4	I		spacer(8.0)	4
B		10mm Anchor bolt	5	H		M5 nuts	4	J		M6 Connecting screws	4
C		Allen key	1	I		spacer(8.0)	4	K		Screw (M5X10)	4
D		Screw (M3X10)	4	J		M6 Connecting screws	4				
E		Screw (M4X10)	4	K		Screw (M5X10)	4				
F		Screw (M5X12)	4								

To Set The Projector Wall Mount On The Wall

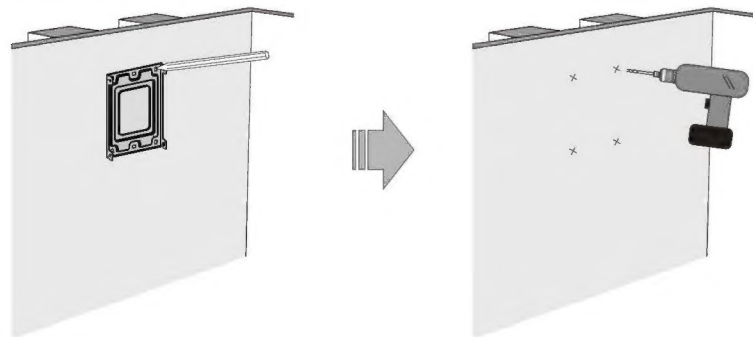


To Set The Projector Wall Mount On The Wall

- Concrete wall mounting thickness must be a minimum 100mm. Anchor bolt and serew (M6 × 55) are needed to be used for installation.

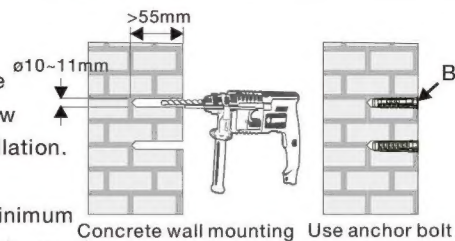


- Dry-wall mounting thickness must be a minimum 70mm. Only serew(M6 × 55) is needed to be used for installation. If the wall is not strong enough, reinforce it sufficiently before installation.

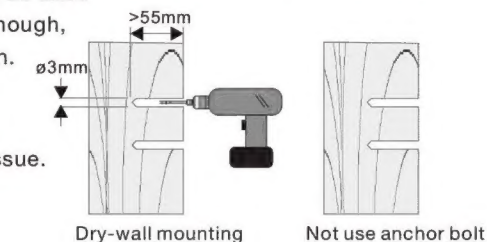


- Please contact manufacturer if you have any questions about mounting surface issue.

CAUTION:
Make sure both mounting holes are on center line of the stud.


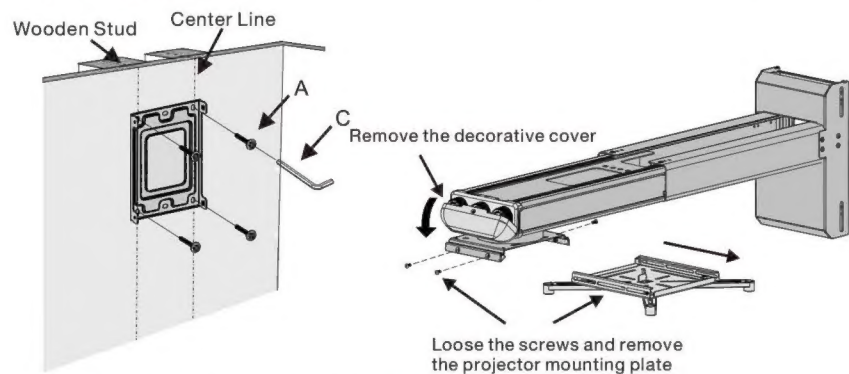


Extra screws and anchor bolt are backup!

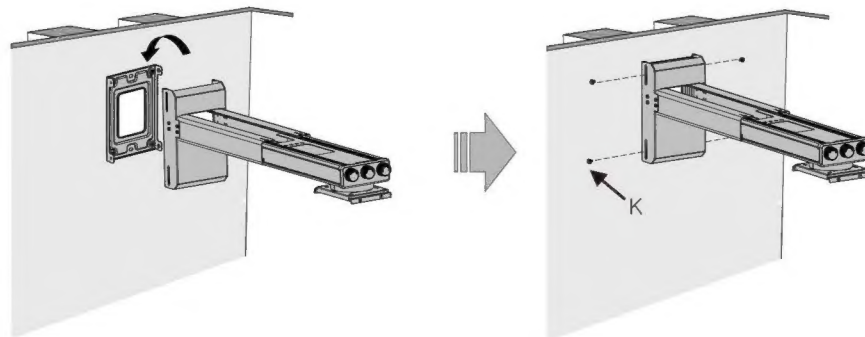


To Install The Projector On The Projector Wall Mount

a. Use the extend arms :

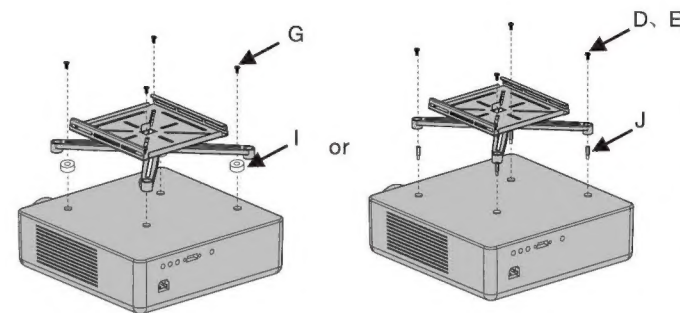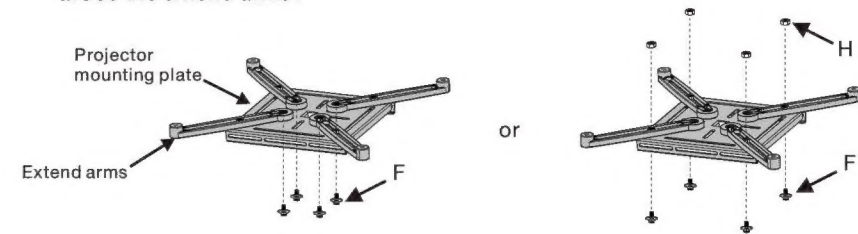


Connecting screws J	Screw from Parts List
Do Not use Connecting screws	D(M3×10) /E(M4×10)
Use Connecting screws J	E(M4×10)

b. Do not use the extend arms :

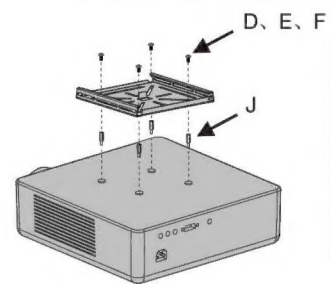

Connecting screws J	Screw from Parts List
Do Not use Connecting screws	D(M3×10) /E(M4×10) /F(M5×12)
Use Connecting screws J	E(M4×10)

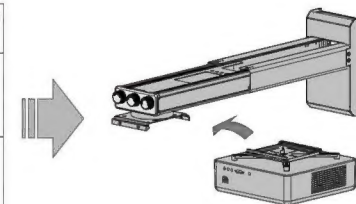

- Move the mouting plate and adjust the leftward/rightward slide.

